


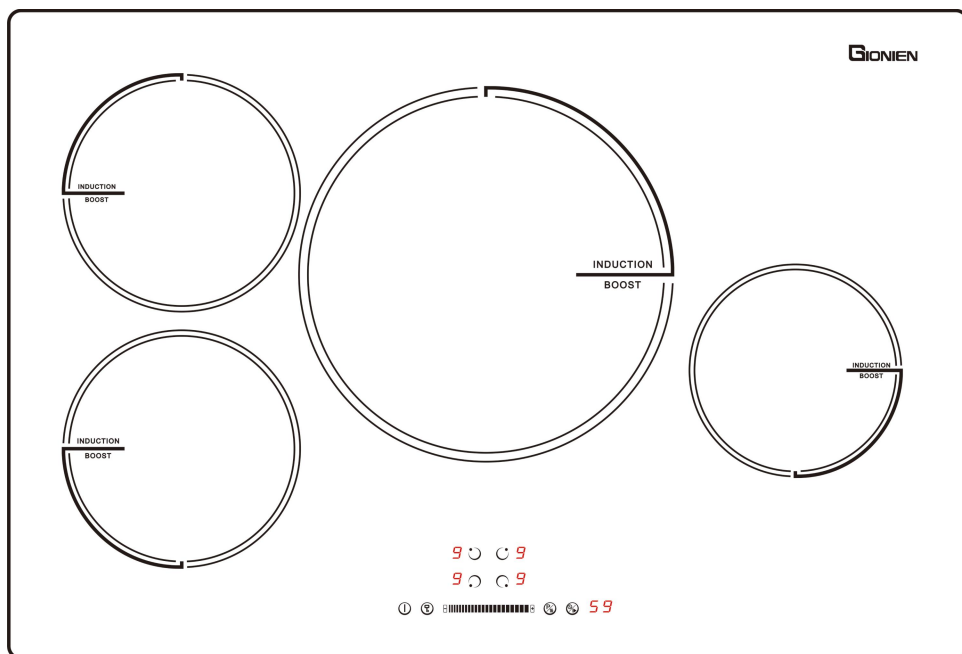

Induction Cooktop

Instruction Manual / Installation Manual

MODEL: GITS472



Safety Warnings

Your safety is important to us. Please read this information before using your cooktop.

- ✓ The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with the appliance.
- ✓ Warning: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock, for cooktop surfaces of glass-ceramic or similar material which protect live parts.
- ✓ Warning: a steam cleaner is not be used.
- ✓ Metallic objects such as knives, forks, spoons and lids should not be placed on the cooktop surface since they can get hot.
- ✓ After use, switch off the cooktop element by its control and do not rely on the pan detector.
- ✓ That the appliance is not intended to be operated by means of external timer or separated remote-control system.
- ✓ Danger of fire: Do not store items on the cooking surfaces.
- ✓ CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

- ✓ **WARNING:** Unattended cooking on a cooktop with fat or oil can be dangerous and may result in a fire.
- ✓ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ✓ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ✓ **WARNING:** The appliance and its accessible parts become hot during use.
- ✓ Care should be taken to avoid touching heating elements.
- ✓ Children less than 8 years of age shall be kept away unless continuously supervised.
- ✓ **WARNING:** Unattended cooking on a cooktop with fat or oil can be dangerous and may result in fire.
- ✓ **NEVER** try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- ✓ **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

- ✓ **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- ✓ **WARNING:** Use only cooktop guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or cooktop guards incorporated in the appliance. The use of inappropriate guards can cause accidents.
- ✓ Power cord can't accessible after installation.

Congratulations on the purchase of your new induction cooktop.


We recommend that you spend some time to read this Instruction / Installation Manual in order to fully understand how to install correctly and operate it.

For installation, please read the installation section.


Read all the safety instructions carefully before use and keep this Instruction / Installation Manual for future reference.

Product Overview



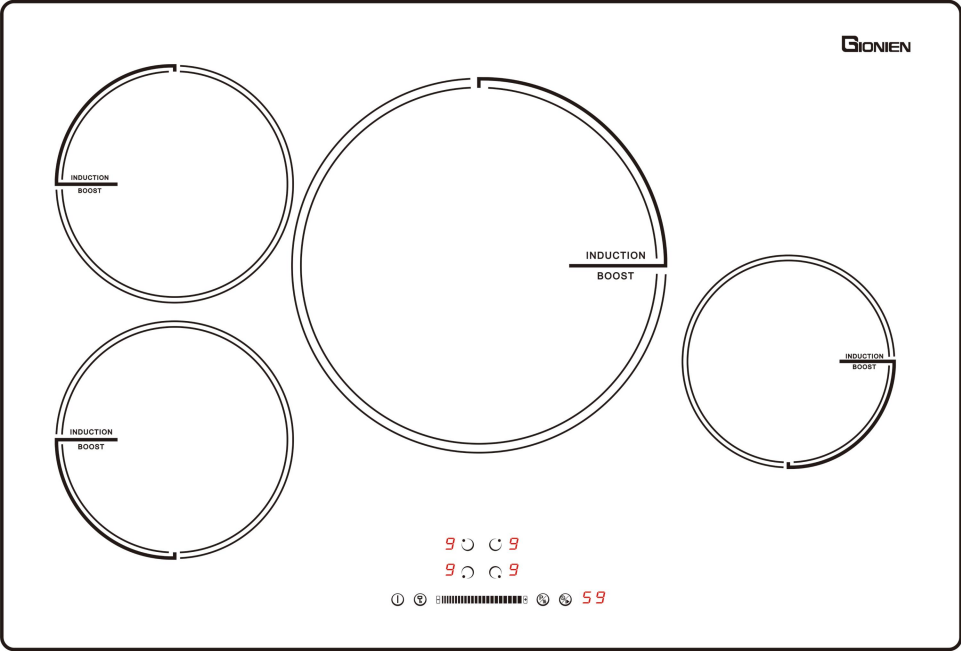

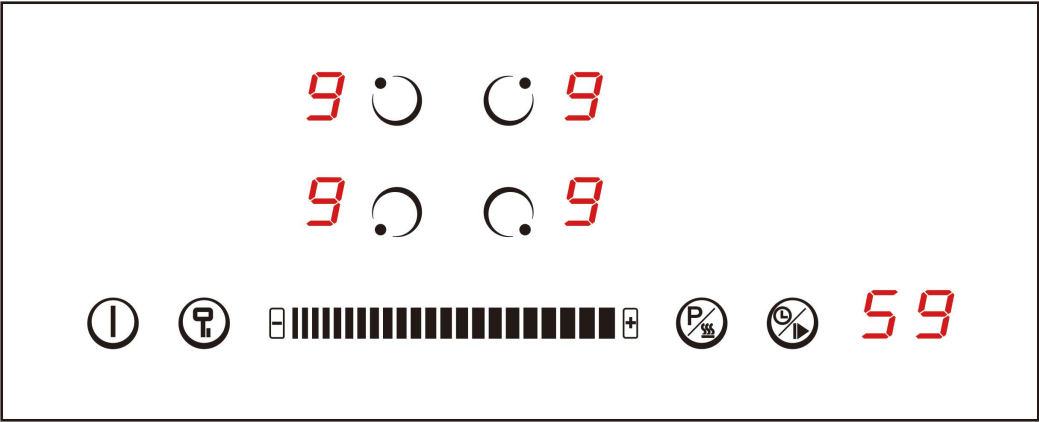

Top View







User Interface



User Interface

Reference	Description
A 	Zone select key
B 	ON/OFF key
C 	Child lock key
D 	Power/Timer slider regulating key
E 	Boost control key/Keep warm key
F 	Timer key/Pause key

Heating Zone Power


Heating Zone	Max. Power (220-240~ 50/60Hz)
	1800/2100W
	1800/2100W
	2300/2600W
	1200/1500W
Total Rating Power	7200W

Heat Settings

The settings below should only be taken as a guide. The power of the induction coils will vary depending on the size and material of the pan. For this reason, it is possible that the settings will need to be adjusted slightly to suit your pans. As you use the cooktop, you will get to know which settings suit your pans best. When using new pans that you are not familiar with, set the power level below the one specified.


Power Level	Recommended Use
1-2	<ul style="list-style-type: none"> •Keep warm •Melting chocolate, butter
3-4	<ul style="list-style-type: none"> •Defrosting and heating •Cooking rice or porridge
5-6	<ul style="list-style-type: none"> •Braising •Simmering •Goulash
7-8	<ul style="list-style-type: none"> •Cooking pasta •Roasting/frying with little oil
9/P	<ul style="list-style-type: none"> •Stir-frying •Boiling water

 Hints and Tips

Problem	Possible causes	What to do
The cooktop cannot be turned on.	No power.	Make sure the cooktop is connected to the power supply and that it is switched on. Check whether there is a power outage in your home or area.
The touch controls are difficult to operate.	There may be a slight film of water over the controls or you may be using the tip of your finger when touching the controls.	Make sure the touch control area is dry and use the ball of your finger when touching the controls.
The glass is being scratched.	Rough-edged cookware. Unsuitable, abrasive scourer or cleaning products being used.	Use cookware with flat and smooth bases.
Some pans make crackling or clicking noises.	This may be caused by the construction of your cookware (layers of different metals vibrating differently).	This is normal for cookware and does not indicate a fault.
The induction cooktop makes a low humming noise when used on a high heat setting.	This is caused by the technology of induction cooking.	This is normal, but the noise should quieten down or disappear completely when you decrease the heat setting.
Fan noise coming from the induction cooktop.	A cooling fan built into your induction cooktop has come on to prevent the electronics from overheating. It may continue to run even after you've turned the induction cooktop off.	This is normal and needs no action. Do not switch the power to the induction cooktop off at the wall while the fan is running.
Pans do not become hot and  appears in the display.	The induction cooktop cannot detect the pan because it is not suitable for induction cooking.	Use cookware suitable for induction cooking.
	The induction cooktop cannot detect the pan because it is too small for the cooking zone or not properly centered on it.	Centre the pan and make sure that its base matches the size of the cooking zone.

A Word on Induction Cooking

Induction cooking is a safe, advanced, efficient, and economical cooking technology. It works by electromagnetic vibrations generating heat directly in the pan, rather than indirectly through heating the glass surface. The glass becomes hot only because the pan eventually warms it up.

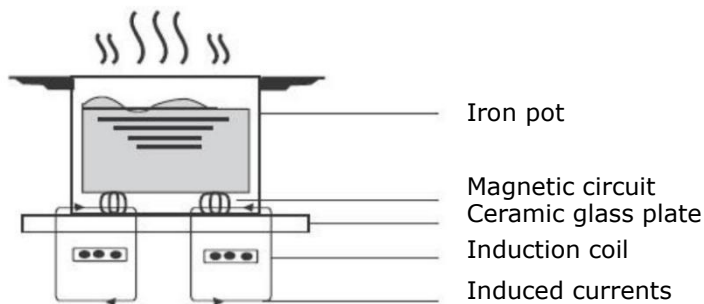


Before Using Your New Induction Cooktop

- Read this guide, taking special note of the 'Safety Warnings' section.
- Remove any protective film that may still be on your Induction cooktop.

Using the Touch Controls

- The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

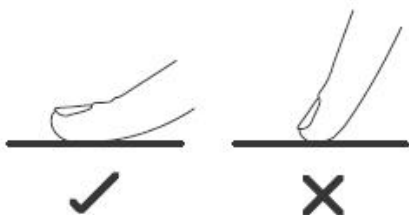


Choosing the Right Cookware



- Only use cookware with a base suitable for induction cooking. Look for the induction symbol on the packaging

or on the bottom of the pan.


- You can check whether your cookware is suitable by carrying out a magnet test. Move a magnet towards the base of the pan. If it is attracted, the pan is suitable for induction.
- If you do not have a magnet:
 1. Put some water in the pan you want to check.
 2. If  does not flash in the display and the water is heating, the pan is suitable.
- Cookware made from the following materials is not suitable: pure stainless steel, aluminum or copper without a magnetic base, glass, wood, porcelain, ceramic, and earthenware.




Do not use cookware with jagged edges or a curved base.



Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Use pans whose diameter is as large as the graphic of the zone selected. Using a pot a slightly wider energy will be used at its maximum efficiency. If you use smaller pot efficiency could be less than expected. Always centre your pan on the cooking zone.

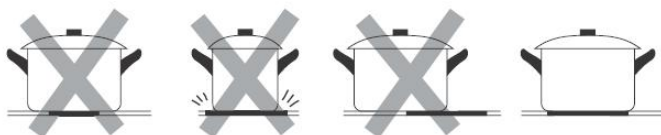

Always lift pans off the induction cooktop – do not slide, or they may scratch the glass.

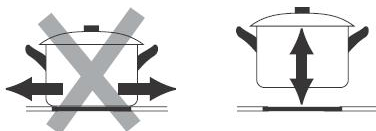


Using Your Induction Cooktop

To start cooking


1. Touch the ON/OFF control for 1 second.

The cooktop will beep once and the zones will show "--" to indicate that standby mode.

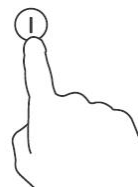


Note: If you do not select a cooking zone and power level within one minute, the cooktop will switch off automatically.

2. Place a pan suitable for induction cooking on a cooking zone; ensure that the base of the pan and the cooking surface is clean and dry.

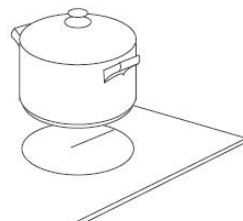

3. Choose the zone using (A) "•" and "0" will flash. If no power level is selected within 5 seconds, "--" will be displayed.

4. Select the output using the power control (D) from 0-9 and cooking commences. You can modify this at any time during cooking.

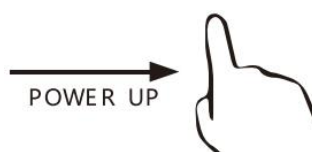

- If you don't choose a heat setting within 1 minutes, the induction cooktop will automatically switch off. You will need to start again at step 1.
- You can modify the heat setting at any time during cooking.

If the display flashes alternately with the heat setting

This means that:

- You have not placed a pan on the correct cooking zone or,
- The pan you're using is not suitable for induction cooking or,
- The pan is too small or not properly centered on the cooking zone.

No heating takes place unless there is a suitable pan on the cooking zone.

The display will automatically turn off after 1 minutes if no suitable pan is placed on it.


When you have finished cooking

1. Select the cooking zone (A).
2. Press the “-”key will decrease the power to “0” level.

Note: “H” will show which cooking zone is hot to touch. It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans, use the hotplate that is still hot.

Using the Boost Function

Activated the boost function



1. Select the heating zone by touching the zone select key (A).
2. Touching the boost control key(E) , the zone indicator show “P” and the power reach Max.

Cancel the boost function




1. Touching the relevant zone select key(A) that you wish to cancel.
2. Touching the slider regulating key(D) to cancel the Boost function, then the cooking zone will revert to level 9.
 - The function can work in any cooking zone.
 - The cooking zone returns to level 9 after 5 minutes.

Using the Pause Function

The cooktop has a handy resume function to pause and resume the cooking process if you're interrupted.

1. When the cooktop is on and working, touching the pause key , all burners will stop working, and all LED indicator will show the symbol "||".
2. Touch the pause key  twice, all functions will resume at the previous setting.
3. If there is no operation within half an hour, it will automatically shut down.

Using the Keep Warm Function

1. Touch the cooking zone selection button if you wish to use the keep warm function, and the indicator next to the key will flash.
2. Touch and hold the button  for 2 seconds, the cooking zone indicator will display .
3. If you want to cancel the keep warm function, select the cooking zone you wish to operate, and then touch the button  and hold for 2 seconds. The cooking zone will be off.

Using Child Lock Function

- You can lock the controls to prevent unintended use (for example children accidentally turning the cooking zones on).
- When the controls are locked, all the controls except the OFF control are disabled.

To lock the controls

Touch the child lock key  for 2 seconds. The timer indicator will show "Lo".

To unlock the controls

1. Make sure the Induction Cooktop is turned on.
2. Touch and hold the keylock control for a while.
3. You can now start using your Induction Cooktop.



When the cooktop is in the lock mode, all the controls are disable except OFF , you can always turn the cooktop off with the OFF control in an emergency, but you shall unlock the cooktop first in the next operation.

Over-Temperature Protection

A temperature sensor equipped can monitor the temperature inside the Induction Cooktop. When an excessive temperature is monitored, the Induction Cooktop will stop operation automatically.

Detection of Small Articles

When an unsuitable size or non-magnetic pan (e.g. aluminum), or some other small item (e.g. knife, fork, key) has been left on the cooktop, the cooktop will automatically go on to standby in 1 minute. The fan will keep cooling down the induction cooktop for a further 1 minute.

Auto Shutdown Protection

Auto shut down is a safety protection function for your induction cooktop. It shut down automatically if ever you forget to turn off your cooking. The default working times for various power levels are shown in the below table:

Power level	1~3	4~6	7~8	9
Default working timer (min)	360	180	120	90

When the pot is removed, the induction cooktop can stop heating immediately and the cooktop automatically switch off after 2 minutes.



People with a heat pace maker should consult with their doctor before using this unit

Using the Timer

You can use the timer in two different ways:


- You can use it as a minute minder. In this case, the timer will not turn any cooking zone off when the set time is up.
- You can set it to turn one cooking zone off after the set time is up.
- You can set the timer for up to 99 minutes.

Using the Timer as a Minute Minder

If you are not selecting any cooking zone

1. Make sure at least one cooking is turned on.

Note: you can use the minute minder even if you're not selecting any cooking zone.

2. Select the cooking zone using (A) and the power level required.
3. When the indicator stops flashing, touch the timer key(F)  and the timer will flash "10".



4. Set the time by touching the "-" or "+" control of the timer.

Hint: Touch the "-" or "+" control of the timer once to decrease or increase by 1 minute.


Touch and hold the "-" or "+" control of the timer to decrease or increase by 10 minutes.

Touching the "-" and "+" together, the timer is cancelled, and the timer indicator will turn off.

5. When the time is set, it will begin to count down immediately. The display will show the remaining time.
6. Buzzer will beep for 30 seconds and the timer indicator will turn off when the setting time finished.

Setting the timer to turn one or more cooking zones off

If the timer is set on one zone:

1. Select the relevant cooking zone which is working by touching the zone select key (A).
2. Select the cooking zone using (A) and the power level required.
3. Before indicator stops flashing, touch the timer key(F)  and the timer will flash "10".



4. Using the "+" and "-" buttons, you can realize the setting of timing from 1 to 99 minutes.

Hint: Touch the "-" or "+" control of the timer once will decrease or increase by 1 minute.

Touch and hold the "-" or "+" control of the timer will decrease or increase by 10 minutes.

Touching the "-" and "+" together, the timer is cancelled, and the timer indicator will turn off.

5. When the time is set, it will begin to count down immediately. The display will show the remaining time and the timer indicator flash for 5 seconds.

NOTE: The red dot next to power level indicator will illuminate indicating that zone is selected.






6. When cooking timer expires, the corresponding cooking zone will be switched off automatically. Other cooking zones will keep operating if they are turned on previously.

7. When using "the timer as an alarm" and "the timer to switch off the zones" together, the display will show the remaining time of alarm as first priority. Press cooking zone to show the remaining time of switch off timer.

Power Limited Operation

Ensure that the induction cooker is turned off and the required power can be set within 60 seconds by following the steps below:

1. After the induction cooktop is turned off, press the A burner key  and the timer key  at the same time to enter the settings.

 
2. The digital tube displays the selectable power, press the A burner key  to select.

3. Optional power is 1.5 kw / 2.8 kw / 3.7 kw / 4.5 kw / 6.0 kw / 6.5 kw / 7.2 kw.

4. Press the timer key to complete the settings. The working power of the whole machine will not exceed the selected gear power.

Failure Display and Inspection


If an abnormality comes up, the induction cooktop will enter the protective state automatically and display corresponding protective codes:

Error Message	Possible Cause	What to do
	No pot or pot not suitable;	Replace the pot;
ER03	Water or pot on the glass over the control	Clean the user interface.
F1E	The connection between the display board and the left mainboard is fail (the cooking zone which indicator showing "E").	1.Connection cable not correctly plugged or defective; 2.Replace the Mainboard.
F3E	Coil temperature sensor failure. (the cooking zone which indicator showing "E")	Replace the coil sensor.
F4E	Mainboard temperature sensor failure. (the cooking zone which indicator showing "E").	Replace the mainboard.
E1E	Temperature sensor of the ceramic glass plate is high.	Please restart after the induction cooktop cools down.
E2 E	Temperature sensor of the IGBT is high.	Please restart after the induction cooktop cools down.
E3 E	Abnormal supply voltage(too high).	Please inspect whether power supply is normal; Power on after the power supply is normal.
E4 E	Abnormal supply voltage (too low).	Please inspect whether power supply is normal; Power on after the power supply is normal.
E5 E	Temperature sensor failure(the cooking zone which indicator showing "E")	Connection cable not correctly plugged or assemble defective.

The above are the judgment and inspection of common failures.

Please do not disassemble the unit by yourself to avoid any dangers and damages to the induction cooktop and please contact the supplier.

By means of a scraper immediately remove any aluminum foil bits, food spills, grease splashes, sugar marks and other high sugar content food from the surface in order to avoid damaging the cooktop. Subsequently clean the surface with some towel and appropriate product, rinse with water and dry by means of a clean cloth. Under no circumstance should sponges or abrasive cloths be used; also avoid using aggressive chemical detergents such as oven sprays and spot removers.

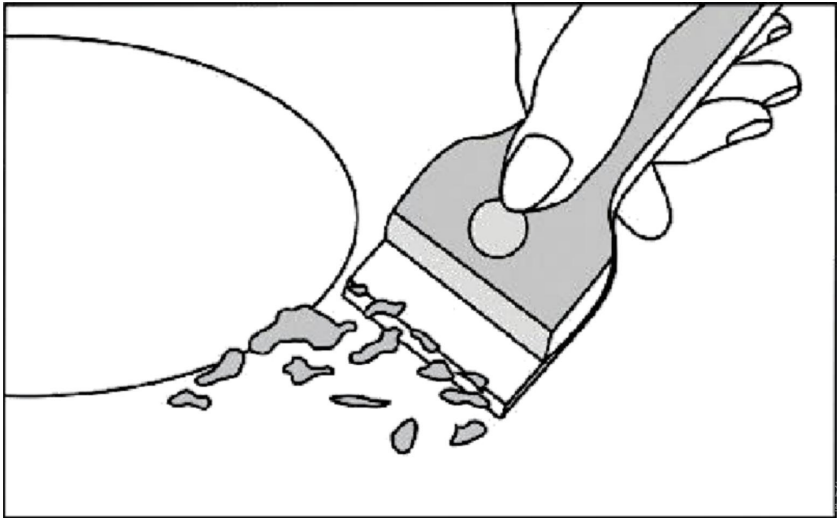

Technical Specification


Cooking Cooktop	GITS472
Cooking Zones	4 zones
Supply Voltage	220-240V~
Installed Electric Power	7200W
Product Size L×W×H(mm)	770X520X53
Building-in Dimensions A×B (mm)	745X495

Weight and Dimensions are approximate. Because we continually strive to improve our products we may change specifications and designs without prior notice.

Installation

Selection of Installation Equipment

Cut out the work surface according to the sizes shown in the drawing.
For the purpose of installation and use, a minimum of 5 cm space shall be preserved around the hole.
Be sure the thickness of the work surface is at least 30 mm. Please select heat-resistant work surface material to avoid larger deformation caused by the heat radiation from the hotplate. As shown below:

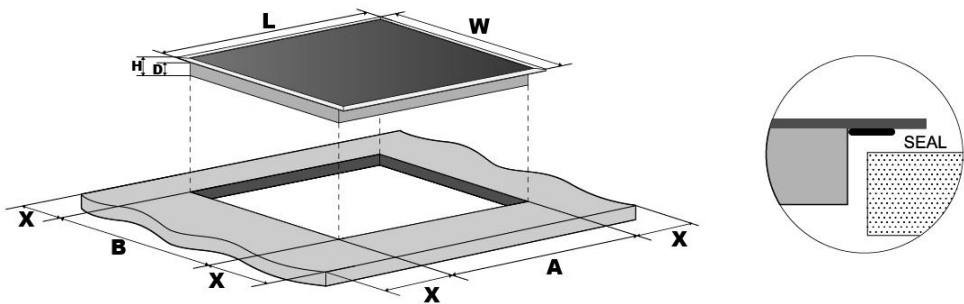


L(mm)	W(mm)	H(mm)	D(mm)	A(mm)	B(mm)	X(mm)
770	520	53	54	745	495	50 mini

Under any circumstances, make sure the induction cooker cooktop is well ventilated and the air inlet and outlet are not blocked. Ensure the induction cooker cooktop is in good work state. As shown below



Note: The safety distance between the hotplate and the cupboard above the hotplate should be at least 760 mm.

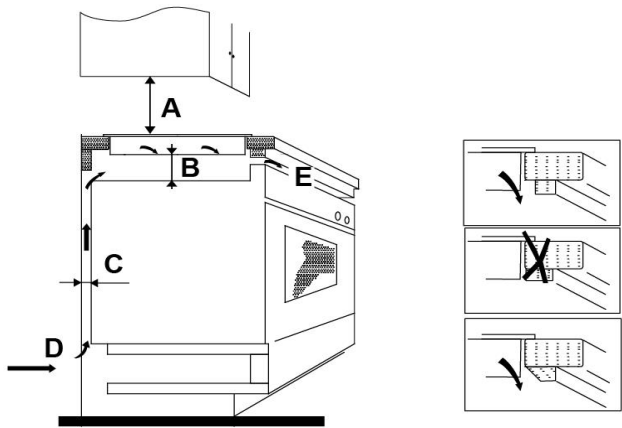

A(mm)	B(mm)	C(mm)	D	E
760	50 mini	20 mini	Air intake	Air exit 5mm

Before you install the cooktop, make sure that

- The work surface is square and level, and no structural members interfere with space requirements.
- The work surface is made of a heat-resistant material.
- If the cooktop is installed above an oven, the oven has a built-in cooling fan.
- The installation will comply with all clearance requirements and applicable standards and regulations.

- A suitable isolating switch providing full disconnection from the mains power supply is incorporated in the permanent wiring, mounted and positioned to comply with the local wiring rules and regulations.

The isolating switch must be of an approved type and provide a 3 mm air gap contact separation in all poles (or in all active [phase] conductors if the local wiring rules allow for this variation of the requirements).

- The isolating switch will be easily accessible to the customer with the cooktop installed.
- You consult local building authorities and by-laws if in doubt regarding installation.
- You use heat-resistant and easy-to-clean finishes (such as ceramic tiles) for the wall surfaces surrounding the cooktop.

When you have installed the cooktop, make sure that

- The power supply cable is not accessible through cupboard doors or drawers.
- There is adequate flow of fresh air from outside the cabinetry to the base of the cooktop.
- If the cooktop is installed above a drawer or cupboard space, a thermal protection barrier is installed below the base of the cooktop to avoid touching of the cooktop..
- The isolating switch is easily accessible by the customer.

Before locating the fixing brackets


The unit should be placed on a stable, smooth surface (use the packaging). Do not apply force onto the controls protruding from the cooktop.

Locating the fixing brackets

- The unit should be placed on a stable, smooth surface (use the

packaging)). Do not apply force onto the controls protruding from the cooktop.

fig. 1

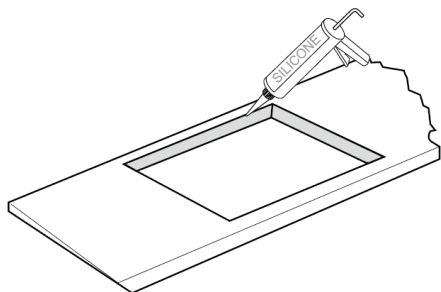


01



Cut out worktop to supplied dimensions shown (fig. 1) with suitable equipment. Seal the cut edge of the worktop using silicone or PTFE and allow to dry prior to fitting the hob.

fig. 2

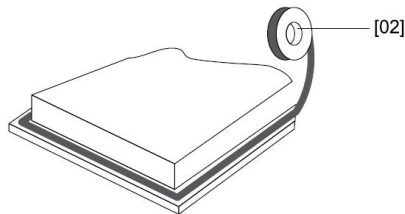

02



[04] x 1

Stretch out the supplied seal along the underside edge of the hob, ensuring the ends overlap.

03


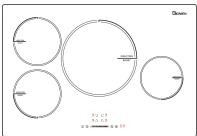


fig. 3

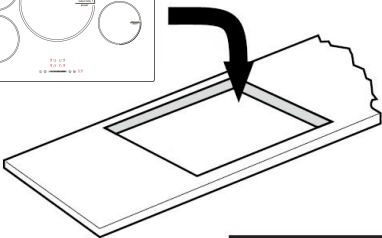

Do not use adhesive to fix the hob into the worktop. Once the seal is fitted position the hob into the cutout in the worktop. Apply gentle downwards pressure onto the hob to push it into the worktop ensuring a good seal around the outer edge (fig. 4)

Cautions

1. The induction hotplate must be installed by qualified personnel or technicians. We have professionals at your service. Please never conduct the operation by yourself.
2. The cooktop will not be installed directly above a dishwasher, fridge, freezer, washing machine or clothes dryer, as the humidity may damage the cooktop electronics.
3. The induction hotplate shall be installed such that better heat radiation can be ensured to enhance its reliability.
4. The wall and induced heating zone above the table surface shall withstand heat.
5. To avoid any damage, the sandwich layer and adhesive must be resistant to heat.

Connecting the cooktop to the mains power supply



This cooktop must be connected to the mains power supply only by a suitably qualified person.

Before connecting the cooktop to the mains power supply, check that:

1. the domestic wiring system is suitable for the power drawn by the cooktop.
2. the voltage corresponds to the value given in the rating plate.
3. the power supply cable sections can withstand the load specified on the rating plate.


To connect the cooktop to the mains power supply, do not use adapters, reducers, or branching devices, as they can cause overheating and fire.

The power supply cable must not touch any hot parts and must be positioned so that its temperature will not exceed 75°C at any point.




Check with an electrician whether the domestic wiring system is suitable without alterations. Any alterations must only be made by a qualified electrician.

European power line access method 1


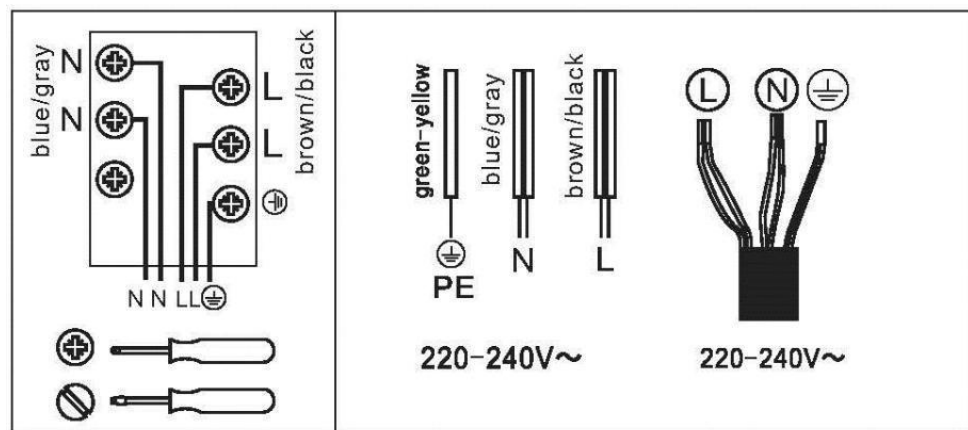


European power line access method 2

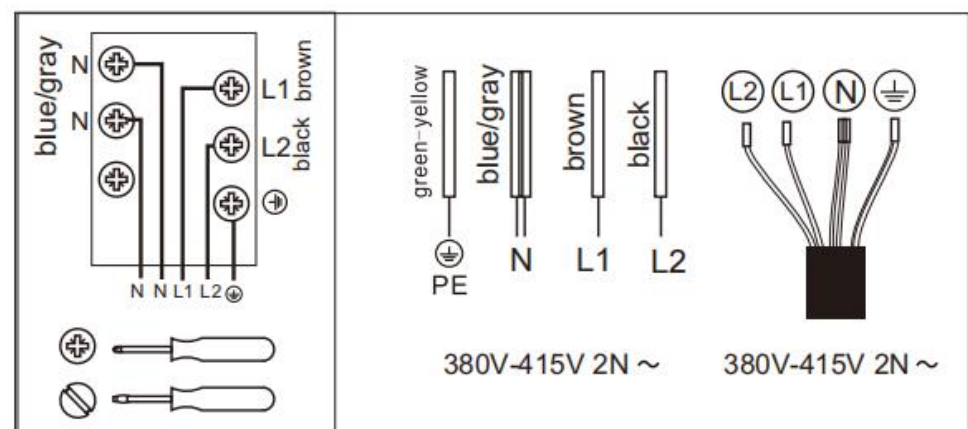

North American Power Line Access Method

Electrical Connection Options(240V)

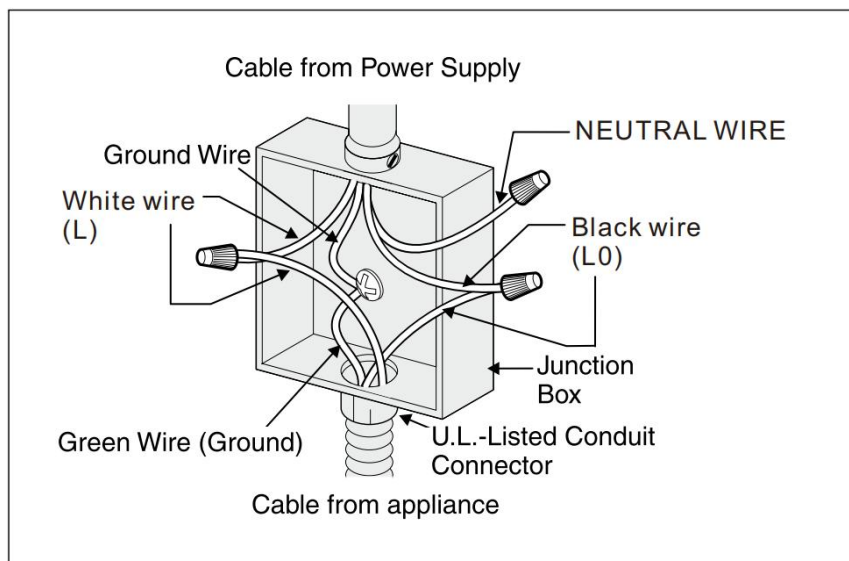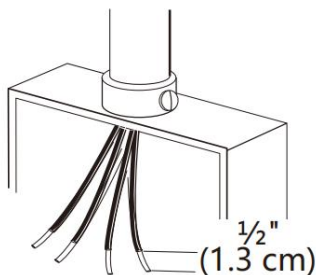

- If the cable is damaged or to be replaced, the operation must be carried out the by after-sale agent with dedicated tools to avoid any accidents.
- If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.
- The installer must ensure that the correct electrical connection has been made and that it is compliant with safety regulations.
- The cable must not be bent or compressed.
- The cable must be checked regularly and replaced by authorised technicians only.

This Appliance Requires a 40 Amp Miniature Circuit Breaker.



DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

This appliance is labeled in compliance with European directive 2011/65/EU for Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is disposed of correctly, you will help prevent any possible damage to the environment and to human health, which might otherwise be caused if it were disposed of in the wrong way.

The symbol on the product indicates that it may not be treated as normal household waste. It should be taken to a collection point for the recycling of electrical and electronic goods.

This appliance requires specialist waste disposal. For further information regarding the treatment, recover and recycling of this product please contact your local council, your household waste disposal service, or the shop where you purchased it.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.